

none1

code: _none1

You need also special SP003 communication cable for analog output transmitters and USB port driver for this cable. Driver is automatically installed during program setup. No special communication cable and USB driver are required for transducers with serial RS232, RS485 or Ethernet outputs.

Technical data